
Positron Universal Insulator Tester With Instant Graphical Capability

Model # 3782651U/50 & 3782651U/60

User Manual

Description and Operation Guide

Version 7.0



Disclaimer Notice: Although Positron Inc. has made every effort to ensure the accuracy of the information contained herein, this document is subject to change.

Contents

1.0	General Information	3
1.1	Publication Information	3
1.2	About this Guide	4
1.3	How to use this Guide	4
1.4	List of Associated References	4
2.0	Introduction to the Universal Insulator Tester	7
2.1	General	7
2.2	Universal Insulator Tester Model Numbers	9
3.0	Description of Insulator Tester Kit	13
3.1	The U-Tester Kit.....	13
3.2	Probe Charger	14
3.3	Universal Insulator Tester Hot Stick Attachments	14
3.4	Insulator Edge Guides.....	15
3.5	Tablet/Laptop	15
3.5.1	General	15
3.5.2	Separating the Tablet While in the Field	16
4.0	Windows-based Insulator Tester Software	18
4.1	Insulator Tester Software Description	18
4.2	The Bluetooth Serial Adaptor	19
4.3	Instant Graphical GO/NO-GO Reporting Capability	19
5.0	Using the Interactive Insulator Tester & Software	23
5.1	BEFORE Testing Sessions	23
5.1.1	Select the Default Folder.....	23
5.1.2	Changing the Folder	24
5.1.3	Create a List of Insulator Identifications.....	24
5.1.4	Verifying Communication Before a Testing Session.....	26
5.1.5	Switching the Probe On	26
5.1.5.1	Power-On Self-Test (POST) of the Probe	27
5.1.6	Check Long-Range Bluetooth Serial Port Communication	28
5.1.7	Get Revision of the Probe	30

5.2	DURING Testing Sessions.....	31
5.2.1	Performing a Scan	33
5.2.1.1	Preparing the Probe for a Scan	33
5.2.1.2	Scanning with the Universal Insulator Tester	34
5.2.2	After an Insulator Scan.....	35
5.2.2.1	Downloading Data	35
5.3	AFTER Testing Sessions.....	38
5.3.1	Displaying Graphs	38
5.3.2	Searching the Database	39
5.4	Important General Notes	40
6.0	Interpreting Graphic Results.....	43
6.1	Understanding the Graphic	43
6.2	Linear / Log Graphic Options	44
6.3	Interpreting Results.....	44
7.0	Specifications	47
8.0	Important Information	51
8.1	Service and Support	51
8.2	Technical Customer Support.....	51
8.3	Customer Training	51
8.4	Repair Service.....	51
8.5	Warranty.....	52
8.6	Limitation of Liability.....	52
8.7	Disclaimer Notice	53
8.8	Cancellation and Rescheduling Charges.....	53

Chapter 1

General Information

1.0 General Information

1.1 Publication Information

© 2017 Positron Inc.

Positron Universal Insulator Tester,

Description and Operation Guide

Part # of User Manual: **925W378265-07E**

Publication date: May 2017

Published By

Positron Inc.

5101 Buchan Street, suite 220

Montréal, Québec

H4P 2R9 Canada

Trademarks

Positron Insulator Tester is a trademark of Positron Inc.

The Insulator Testers are manufactured by Positron Inc. in Montreal, Canada. The Positron Insulator Testers is protected by US patents including “METHOD AND APPARATUS FOR THE VERIFICATION OF AN ELECTRICAL INSULATOR DEVICE BASED ON THE ANALYSIS OF THE ELECTRICAL FIELD ALONG THE INSULATOR”.

Product names, other than Positron’s, mentioned herein may be trademarks and/or registered trademarks of their respective companies.

Confidentiality Notice

The information contained in this document is the property of Positron Inc. Except as specifically authorized in writing by Positron Inc., the holder of this document:

- 1) shall keep all information contained herein confidential and shall protect same in whole or in part from the disclosure and dissemination to all third parties, and
- 2) shall use same for operating and maintenance purposes only.

1.2 About this Guide

This guide introduces and describe to you the operation of Positron's Live Line High Voltage Tester used as a maintenance tool to test and report defects in Porcelain and Composite (Polymeric) Insulators and for use as a safety tool to determine the condition of high-voltage insulators prior to beginning Live-Power Line work.

1.3 How to use this Guide

This guide was designed to describe the operational modes of the Universal Insulator Testers:

The reader is invited to use the digital (PDF) version of this document to allow searching by keywords. Select **Edit**, then **Find** from the pull-down menu.

1.4 List of Associated References

[1] "Suspension Insulator Puncture Tester"; Report No. ELE 92-62; Bonneville Power Administration Division of Laboratories; December 7, 1992.

[2] G.H. Vaillancourt, J.P. Bellerive, M. St-Jean, C. Jean, "New Live Line Tester for Porcelain Insulators on High-Voltage Power Line," IEEE Transactions on Power Delivery, Vol. 9, January 1994, pp. 208-219.

[3] "J.C. Pohlman, C.R. Davis, "Cracked Insulators Create Hazardous Working Conditions During Restoration after Extreme Ice Storms," Proceedings of ESMO-95, Columbus, Ohio, USA, October 29 - November 3, 1995, IEEE Paper 95CH35755.

[4] A.S. Jagtiani, J.R. Booker, "Aging of Porcelain Insulators Under Mechanical and Electrical Stress on EHV AC Lines," Proceedings of ESMO-95, Columbus, Ohio, USA, October 29 - November 3, 1995, IEEE Paper ESMO 95-CP-08.

[5] G. H. Vaillancourt, M. Hamel, J. Frate, "Experience with Two Faulty Composite Insulators Detection Methods in Hydro-Quebec," Conference Proceedings of 10th International Symposium on High Voltage Engineering, Montreal, Canada, August 25-29, 1997.

[6] G. H. Vaillancourt, P. Bilodeau, "Diagnostic Testing of Composite Insulators Used on Series Compensation Platforms in Hydro-Quebec," Conference Proceedings of 11th International Symposium on High Voltage Engineering, London, England, August 22-27, 1999.

[7] G. H. Vaillancourt, S. Carignan, C. Jean, "Experience with the detection of faulty composite insulators on High-Voltage power lines by the E-field measurement method," IEEE Transactions on Power Delivery, Vol. 13, No. 2, April 1998, pp 661-666.

[8] Y.C. Chen, C. R. Li, X. Liang, S. Wang, "The Influence of Water and Pollution on Diagnosing Defective Composite Insulators by E-field Mapping," Conference Proceedings of 11th International Symposium on High Voltage Engineering, London, England, August 22-27, 1999.

[9] D. H. Shaffner, D. L. Ruff, G. H. Vaillancourt, "Experience with a Composite Insulator Testing Instrument based on the Electric Field method" ESMO 2000, Montreal, Canada, October 8-12, 2000.

[10] L. J. Fernandez, J. M. Munoz, A. Andrés, "Electric field measurement on composite insulators using live working techniques", 5th International Conference on Live Maintenance, ICOLIM 2000, Madrid, Spain, May 17-19, 2000.

[11] I. Gutman (SE), A. Pignini (IT) et al. "Assessment of Composite Insulators by means of Online Diagnosis", CIGRE WG B2.21 2013.

[12] C. Jean, "High Voltage Insulator Testing based on Electric Field method" 2015 INMR World Congress Conference, Munich, Germany, September 2015.

Chapter 2

Overview

2.0 Introduction to the Universal Insulator Tester

2.1 General

The document describes the operation of Positron's Universal Insulator Tester:

Model # 3782651U/50: Universal Insulator Tester, 50Hz

Model # 3782651U/60: Universal Insulator Tester, 60Hz

Refer to Figure 1 on page 6 for a detailed drawing of the unit.

With the Universal Insulator Tester field Probe mounted onto a user-supplied (non-conductive) hot-stick, the user takes a reading by pressing the field Probe against the insulator, using the Pressure Switch-mounted Insulator Edge Guide for proper positioning during testing.

Each time the Pressure Switch is triggered, a reading is taken. The electric field surrounding the insulator is recorded. Defective insulators are easily identified using the resulting data graphs that present the contour of the electric field surrounding the insulator. The field Probe contains a microprocessor-based recording system.

After an insulator is scanned by the Tower Operator, the Ground Operator immediately downloads the Probe's data via a long range Bluetooth communication link to the Tablet/Laptop for on-site analysis. Any conductive defect in an insulator will cause a change in the electric field surrounding the insulator. This perturbation of the electric field indicates a faulty insulator.

The fault is detected, identified, and measured by the Probe, and the data is immediately downloaded to a database installed on the Tablet/PC for analysis. The graph displaying the E-Field of the insulator is clearly displayed on the Tablet/Laptop while in the field enabling **GO/NOGO** decision-making on-the-spot.

The data is stored in ASCII format in order to be compatible with any text editor, including Excel spreadsheet and Microsoft NOTEPAD, plus the ASCII data can be imported into existing customer databases.

NOTE



- Verify the Date and Time settings of the Tablet/Laptop
- It is important to disable the WIFI of the Tablet/Laptop to avoid long operating system updates while performing a testing session.

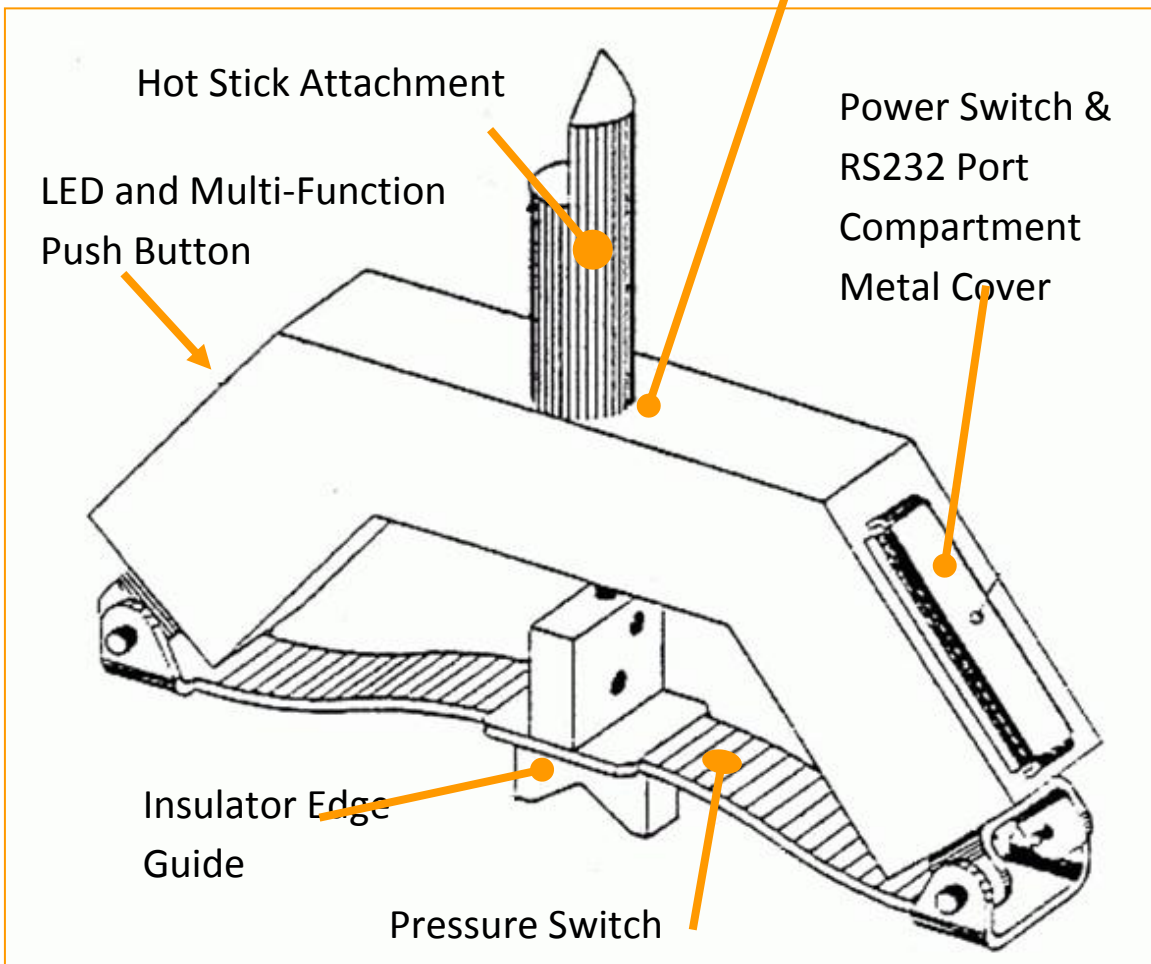
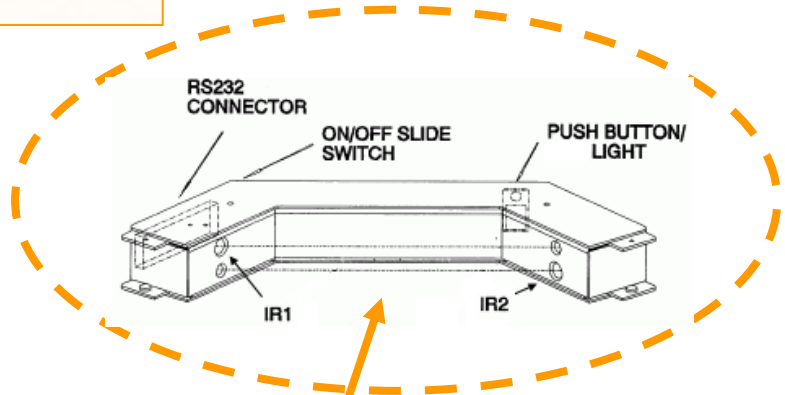


Figure 1: Universal Insulator Tester (U-Tester)
Model #s 3782651U/60 (60Hz) & 3782651U/50 (50Hz)

2.2 Universal Insulator Tester Model Numbers

For ordering information, contact Positron Customer Support:

North America: 1-888-577-5254, Option 9, Option 1.

International: 001-514-345-2220, Option 9, Option 1

Testers and Model Numbers

Item Description	Model Number
Universal tester, 60 Hz	3782651U/60
Universal tester, 50 Hz	3782651U/50
220Vac/120Vac charger replacement	378126
Rechargeable battery pack replacement for the Probe	378127
12Vdc auxiliary automotive power charger replacement	378128
RS232 Bluetooth adapter replacement	378325/3
Replacement cover plate for Probe power switch (Min Order 25 pcs)	378613



Chapter 3

Insulator Tester Elements

3.0 Description of Insulator Tester Kit

3.1 The U-Tester Kit

The U-Tester kit consists of:

- Spare switch cover
- A Quick Start Guide
- A rugged carrying case
- Two switch actuator bumpers
- A 12Vdc auxiliary automotive power charger
- A Universal Insulator Tester Electric Field Probe
- User manual in print and stored electronically on the Tablet/Laptop
- A long-range (100m / 328 ft) Bluetooth (RS232) Serial Adapter, pre-paired with the Tablet/Laptop
- A Tablet/Laptop with Insulator Tester Data Processing Software installed
- Plug-in wall transformer: 120Vac/220Vac input, 12Vdc output (includes international wall-plug adaptors)

The **Operator Interface** (see Figure 2) consists of:

- a push-button,
- a Status LED and
- an internal buzzer.



Figure 2

In addition, an internal switch located near the RS232 connector is used to switch the power ON or OFF. See Figure 3.

CAUTION



DO NOT SWITCH THE POWER SWITCH OFF BEFORE DOWNLOADING THE DATA.

When the power is switched off the accumulated data is lost. Once the data has been downloaded, slide the switch away (left) from the RS232 connector to switch the unit off.



Location of Power Switch Cover

Power Switch Cover

Power Switch

Figure 3

The Electric field Probe uses two infrared detectors to detect the position of the Switch Actuator. Please refer to Figure 4. The two infrared detectors are identified as IR1 and IR2.

The RS232 connector port is used to recharge the Probe's battery and to connect a Bluetooth adapter for data transfer.

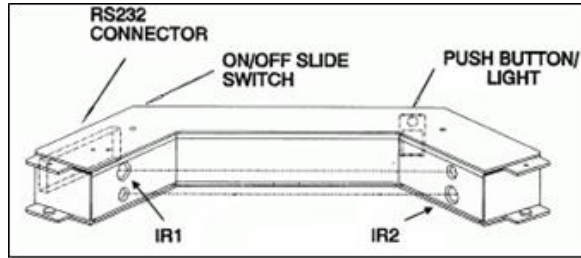


Figure 4

3.2 Probe Charger

The Probe's battery is recharged using a 120Vac/220Vac universal wall charger connected to a cable with a DB-9, RS232 female connector to connect to the Probe. A set of AC charger adaptors is provided to accommodate various country standards. For charging the Probe in the field, a 12Vdc auxiliary automotive charger cable terminated in a DB-9 connector is supplied to recharge the battery from a car or truck.

Both the AC power charger and the automotive DC charger are equipped with an LED status to report on the charging time. When first plugged in to charge, the LED will glow red. After 9 hours on charge, the LED will glow green, indicating that the charging time is completed.



The battery should be recharged overnight the day before a testing session. The battery charge will last one day with the power switch in the ON position.

The battery can be recharged with the power switch in the ON or OFF position, however the Probe will charge faster when switched off.

The data accumulated by the Probe must be transferred via Bluetooth to a Tablet/Laptop prior to switching the Probe off or the data will be lost.

3.3 Universal Insulator Tester Hot Stick Attachments

The Universal Insulator Tester Probe has an integrated hot-stick coupler. Additionally, in the field Probe kit there is a universal adaptor joint that enables total flexibility for positioning the field Probe actuator against the insulator. See Figures 5.



Model # 378265U1/x



Figure 5

3.4 Insulator Edge Guides

The Universal Insulator Tester is shipped with two Insulator Edge Guides. See Figure 6.

The Insulator Edge Guides help guide the Probe onto the insulator. Use the guide that best fits the insulators being tested.

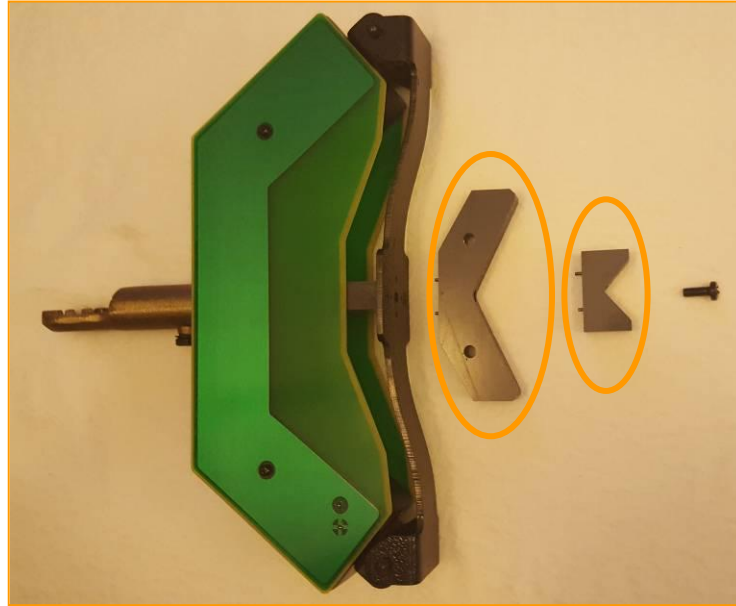


Figure 6

3.5 Tablet/Laptop

3.5.1 General

A Tablet/Laptop is provided with the Probe. The Tablet/Laptop is Bluetooth-enabled and is shipped paired with the Bluetooth transmitter of the Probe. Refer to Figure 7.

The Insulator Tester Data Processing Software is pre-installed on the Tablet/Laptop.

The Tablet/Laptop is used on-site for transfer of the data from the Probe after one or more scans of one insulator to view the resulting graphs. The transfer of data to the Tablet on-site avoids the risk of data loss should the tester be switched off.



Figure 7

CAUTION



The Tablet/Laptop must not be used by the lineperson at the top of the transmission tower for safety reasons. The Tablet/Laptop should be operated by a person at ground level.

3.5.2 Separating the Tablet While in the Field

When using the Tablet/Laptop in the field, it is best to separate the Tablet from its associated keyboard, as shown in Figure 8.

When attached, the keyboard is useful when creating insulator lists and preparing for the field visit.

The Tablet has a generously sized touch screen. Large “Touch Buttons” are used to operate the Windows-based Positron Insulator Tester Software in the field.

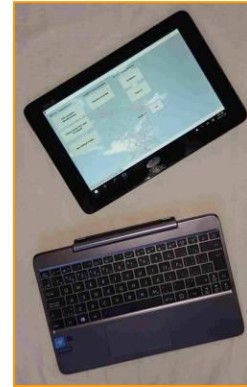


Figure 8




While the Ground Operator is using the Tablet on the ground, the Tower Operator tests the insulator. When they have completed one or more tests of the insulator, they download the results immediately to the Tablet and see the profile of the E-field surrounding the insulator, thereby revealing its health, and determining immediately if a hazardous condition exists prior to live line transmission work.

The intensity of the Tablet’s screen display is factory adjusted to its maximum setting. If this setting was changed by a user, it is important to adjust the intensity of the screen back to the maximum (Select 100% after selecting the small battery icon).

Additionally, polarized sunglasses may prevent easily seeing the display on the Tablet screen in Landscape mode (long edge of the Tablet screen is horizontal).

In this situation, rotate the Tablet 90° to switch to Portrait mode (short edge of the Tablet screen is horizontal). Otherwise, avoid the use of polarized sunglasses during use.

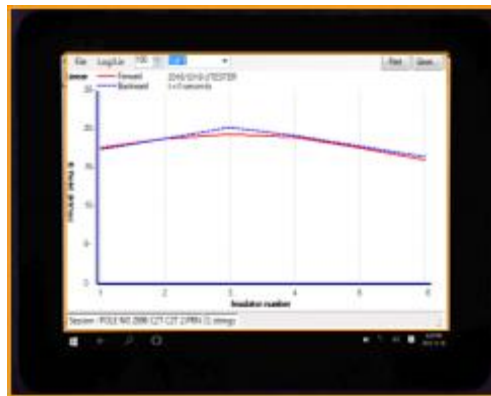

Example Only

Chapter 4

Windows Based Software

4.0 Windows-based Insulator Tester Software

The Positron Insulator Tester Software was factory-installed on the Tablet/Laptop shipped with the Insulator Tester. Similarly, the RS232 Bluetooth adapter has been factory-paired with the Tablet/Laptop shipped.


4.1 Insulator Tester Software Description

The Tablet/Laptop is Windows based and has the Positron Insulator Tester Software pre-installed. All data formats are backward and forward compatible. The long range Bluetooth Class I device enables on-the-spot remote downloading.

The Windows-based Insulator Tester Software is used:

- A) **BEFORE** the testing session:
- To create and store one or more lists of insulator's identifications used to identify in the field each insulator prior to generating a graph of the insulator E-field
 - To test the Bluetooth communication between the Tablet and the Probe
 - To set a different working folder
- B) **DURING** the testing session
- To remotely download the data scanned by the insulator tester
 - To identify last scanned insulator from the list
 - To display the graphic representation of the E-field along with the identification of the insulator
 - To make on-site **GO/NOGO** decisions based on the severity of the defects detected
 - To retain or discard the immediate results of a downloaded insulator test
 - To signal the Tower Operator
 - To put the probe in sleep mode after the testing of all insulators of a tower
- C) **AFTER** the testing session
- To use as a reference database to evaluate insulator degradation over time
 - To display the relative health of insulators using graph of the E-field along an insulator during live-line conditions
 - To use as a tool in the asset management associated with all manner of HV insulators, station hollow posts, bushings, lightning arrestors, etc, of both Porcelain and Composite (Polymeric) varieties

The Insulator Tester Software has been pre-installed on the Tablet/Laptop supplied with the unit. The icon for the Insulator Tester Software appears on the main-touch screen.

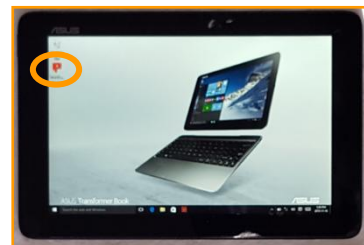

4.2 The Bluetooth Serial Adaptor

The long-range (100m) Bluetooth serial adaptor is powered by the Probe and has been paired with the Tablet/Laptop supplied with the Universal Insulator Tester.

4.3 Instant Graphical GO/NO-GO Reporting Capability

The Positron Universal Insulator Tester enables an on-site **GO/NOGO** decision-making capability. A scan instantly downloaded to the Tablet/Laptop from the Probe is used to get a graphic representation of the E-field distribution of an insulator showing all defects. A decision for emergency replacement or establishing safety levels for live-line work can then be made.

During the scanning of an insulator, the Tower Operator manipulates the Insulator Tester with a hot stick, while the Ground Operator uses the Tablet/Laptop. Once the scan is done, the Ground Operator can immediately download the data to get the graphic representation of the distribution of the E-field of the insulator.

Once the Ground Operator has downloaded the data from the Probe and has viewed the graph of the insulator's E-field, the Ground Operator can choose to **Accept** or **Reject** the scan using the Windows-based Insulator Tester software interface installed on the Tablet/Laptop. In either case, the data in the Probe gathered during the scan will be deleted after download to the Tablet/Laptop.

Chapter 5

Using the Interactive Insulator Tester & Software

5.0 Using the Interactive Insulator Tester & Software

The Universal Insulator Tester and Tablet/Laptop are used together in the field. The Ground Operator controls the Tablet/Laptop running the Windows-based Insulator Software while the Tower Operator controls the Universal Insulator Tester and scans the insulator string.

After a scan of an insulator, the Ground Operator can instantly download the resulting data obtained by the Tower Operator. Once downloaded, the Ground Operator can view the E-field profile of the scanned insulator on the screen of the Tablet/Laptop and the relative health of the insulator can be assessed while in the field.

Using the Tablet/Laptop, the Ground Operator can choose to **Accept** or **Reject** the scan. In both cases, once a choice has been made by the Ground Operator the data in the Probe is erased. If the choice is made to **Accept** the scan, the data is stored on the Tablet/Laptop


5.1 BEFORE Testing Sessions

If required, adjust the date and the time of the tablet. Begin by double-clicking the Insulator Tester icon. Ensure that the Bluetooth feature is enabled on the Tablet/Laptop.




5.1.1 Select the Default Folder

First, set the Default folder where the data will be stored. From the screen, select **Set Default Folder**. A dialogue box will be returned showing you the default file location.

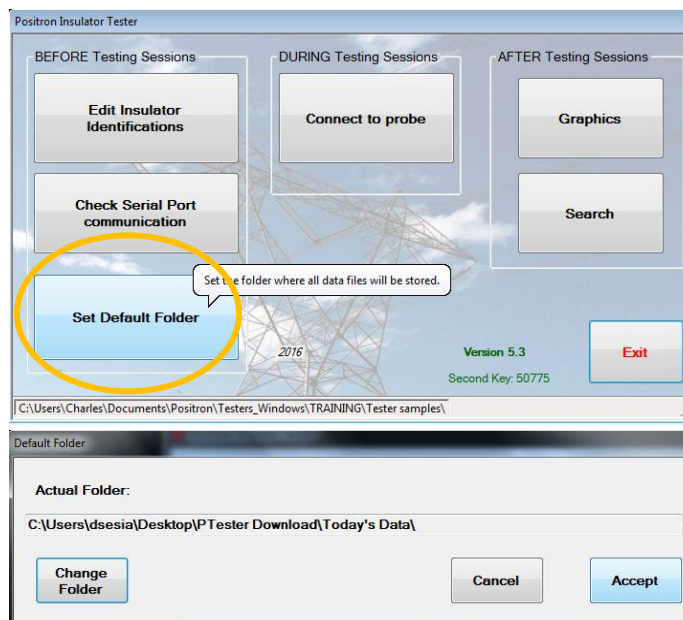

5.1.2 Changing the Folder


You can change the default location and folder name by selecting **Change Folder**. The **Change Folder** selection and Windows OS will guide you through the steps. Be sure to select **Accept** at the end of the process.

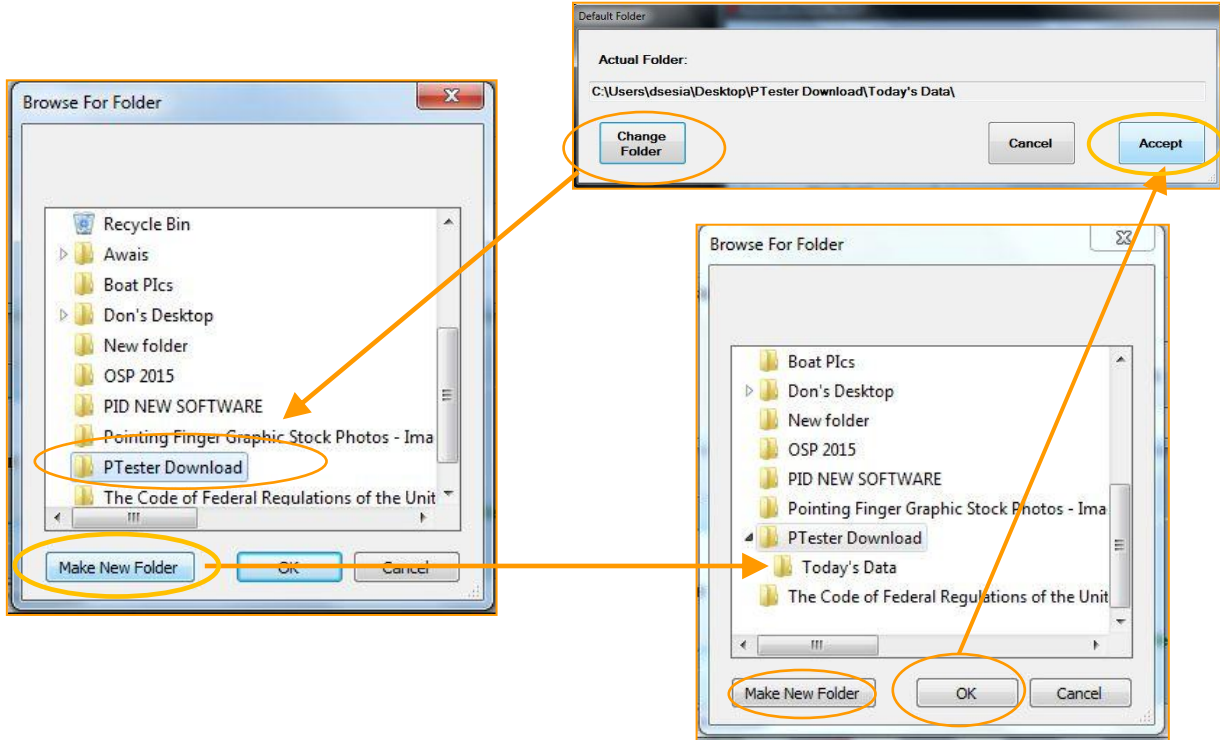


5.1.3 Create a List of Insulator Identifications

Create a listing of all insulators to be tested during an upcoming Testing session. This list will be used during a testing session to identify each insulator. This is best done with the Tablet engaged with the keyboard for ease of typing. Select **Edit Insulator Identifications**.

A dialogue window will open so you can open the **Default.id** file. This will be used to enter the information identifying the insulators to be scanned.

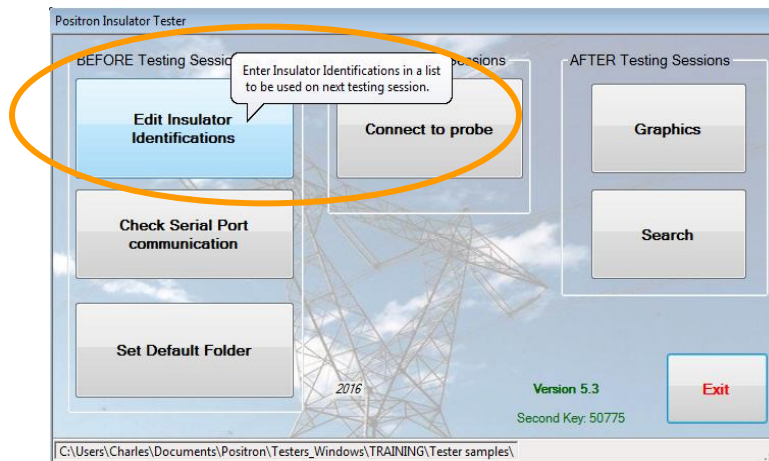

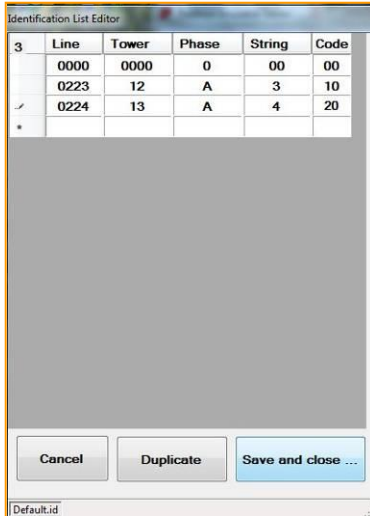


The **Identification List Editor** will open. Edit a field by clicking into it and move to the next field using the **TAB** key on your keyboard. The **ENTER** key will bring you to the field immediately beneath.


With the list completed, select **Save and Close**.

Note that number shown in the upper-left corner of the **Identification List Editor** corresponds to the number of entries there are in the list.

Enter any user defined code in the **Code** field.

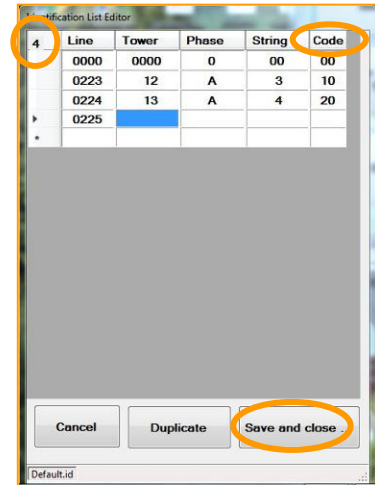

This will open the **Save this Identification List** dialogue box.

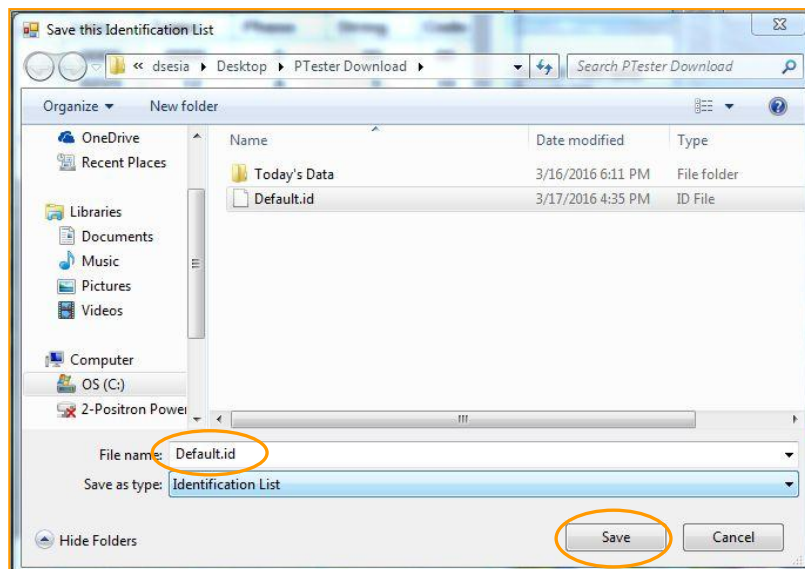

Enter a name for your list, and click **Save**. The list is saved with a file suffix of **“.ID”**.

5.1.4 Verifying Communication Before a Testing Session

Prior to going out in the field to use the Universal Insulator Tester, testing the long-range Bluetooth communication between the Probe and the Tablet/Laptop is advised. This can only be done with the Probe activated. After communication has been established, the Probe and long range Bluetooth adaptor can be switched off again before going out into the field.

5.1.5 Switching the Probe On

To activate the Probe, remove the Power Switch Cover and move the power switch to the right, toward the DB-9 connector, as shown in Figure 9. The Probe will first enter the Power-On Self-Test (POST). See 5.2.5.1 for details.

Ensure the slide switch on the Bluetooth adapter is in the DCE position. Insert the long range Bluetooth Serial adapter into the DB-9 Serial port of the Insulator Tester Probe. The long range Bluetooth Serial adapter is powered by the battery of the Probe.

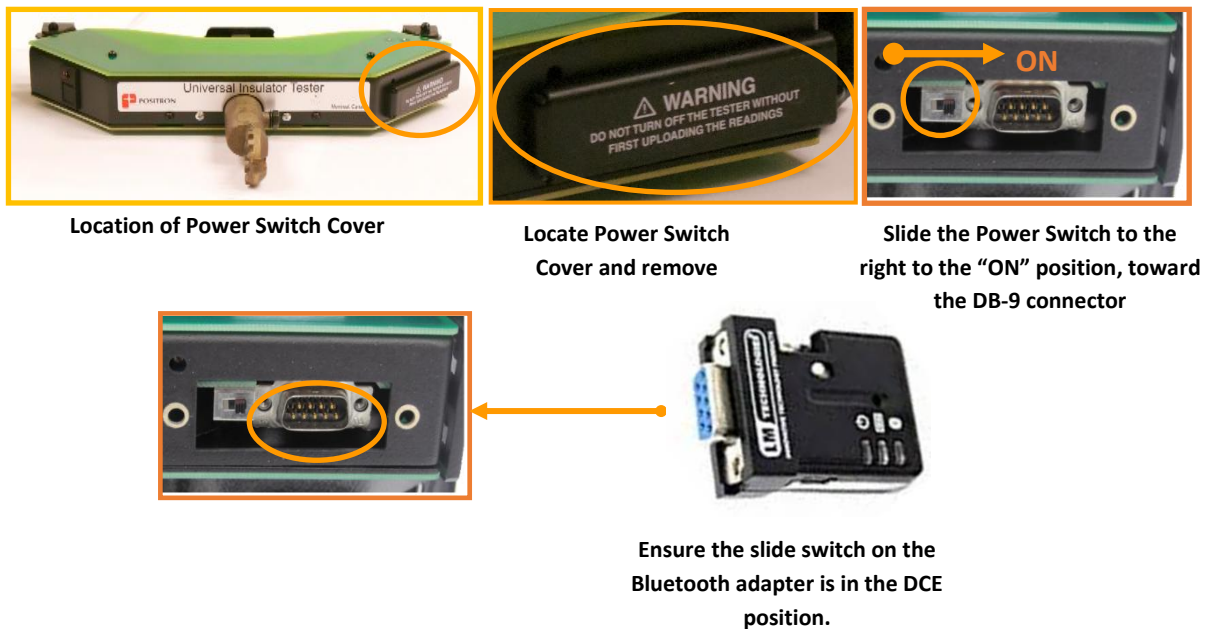


Figure 9


5.1.5.1 Power-On Self-Test (POST) of the Probe

Upon switching the Probe on, the **POST** process commences and the infrared detectors are verified.

The power-up sequence for the 3782651U/x Universal Insulator Tester is described below:

1. Apply power by sliding the switch located on the side of the Probe, underneath the Switch Cover, toward the RS232 connector
2. The LED will flash **Amber** once
3. The LED will then flash **Green** four times
4. After which, the LED will flash **Amber** 10 times and shut off during which the Infrared beams and sensors are tested (IR1, IR2).
5. If the **Red** LED begins flashing, then the Probe's infrared sensors are being obstructed. Ensure that there are no obstructions and that the lenses are not fouled. The **Red** LED will stop flashing the moment the infrared beams are unobstructed.

To fully check the 2 infrared beams (IR1, IR2), apply pressure on the Insulator Edge Guide edge of the bumper at the beginning of the long tone.

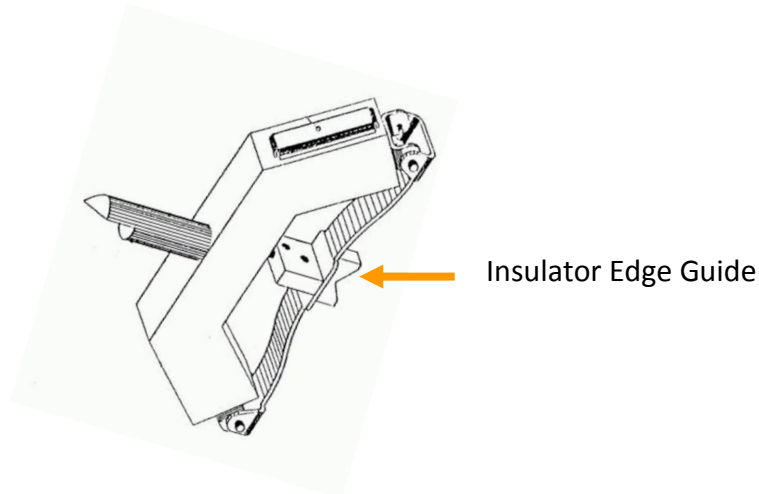


Once the infrared beams have been broken, or after flashing 10 times, the LED and the tone will shut off.


Once the Probe has been activated and the **POST** procedure is finished, communications between the Probe and the Windows-based software on the Tablet/Laptop must be tested.

5.1.6 Check Long-Range Bluetooth Serial Port Communication

Select the **Check Serial Port Communication** button to verify long range Bluetooth connectivity between the Tablet/Laptop and the Probe prior to going into the field.

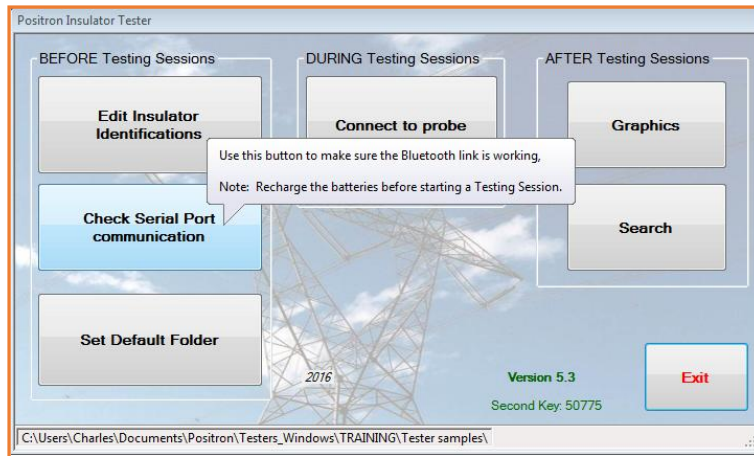


The **Check Bluetooth Serial Port** dialogue screen will appear. Select the COM Port used by the Tablet/Laptop to communicate with the Bluetooth adapter.

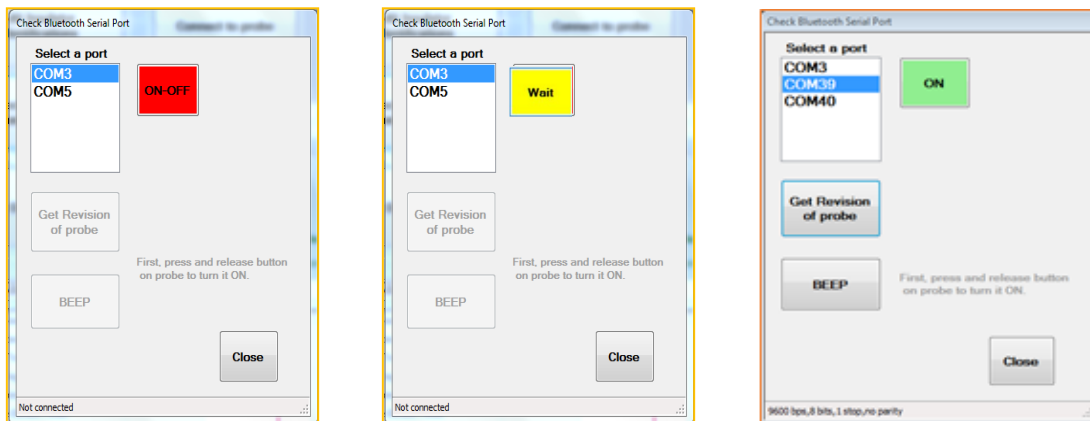

Select the RED **ON-OFF** button. The button will change to YELLOW and “Wait” will appear until Bluetooth communication is established, and then it will change to GREEN.



If the button does not change to **YELLOW** and read "Wait", but changes to **GREEN** immediately, try another port. If the button flashes **YELLOW** before **GREEN**, you have connected to the correct COM port. If the incorrect COM Port has been selected, an error message may be returned. If so, change the COM Port and retry.

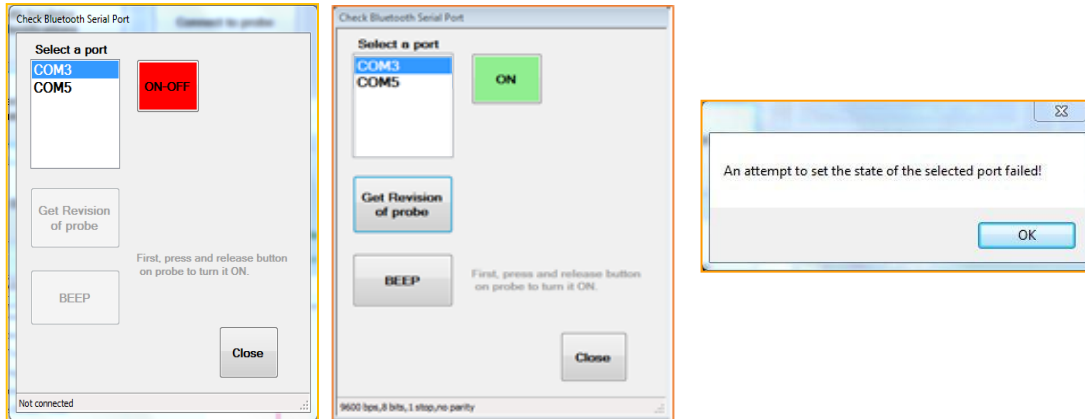

These steps verify communication with the Tablet and the Probe's long range Bluetooth RS232 Adapter.

Take note of the COM port associated with the long range Bluetooth Adapter. This COM port will need to be reconnected once the unit is taken to the field for a scanning session.

It is important not to transport the Probe to the testing location with the long range Bluetooth Adapter inserted in the DB9 connector. This is to avoid possible physical damage during transport.



The buttons in the Insulator Tester Software change to **GREEN** once each software function receives an acknowledgment from the Probe. If a button in the Insulator Tester Software changes to **RED** after it has been **GREEN**, the Probe may be in sleep mode and the Push Button of the Probe must be pressed to bring the unit into Awake Mode.

5.1.7 Get Revision of the Probe

Select **Get Revision of the Probe** to receive the Probe's internal Firmware Revision level. Normally, this function is used by Positron Technical Support when troubleshooting the Probe. In this instance, the function is used as a confirmation that the Tablet/Laptop can communicate a command to the Probe and that the Probe will respond via the long range Bluetooth communication through the associated COM Port.

Once you have selected **Get Revision of the Probe**, communication between the Tablet and Probe is established. Ensure that the Probe is in **Awake Mode** by pressing the push button of the Insulator Tester Probe. See Figure 10. If required, select **Get Revision of the Probe** after the Probe is awakened.

This step verifies that the Tablet/Laptop can communicate with the Probe. Once Bluetooth connectivity and functional communication are verified, the Probe can be switched off. The Probe will be switched on again in the field when scanning is to begin.

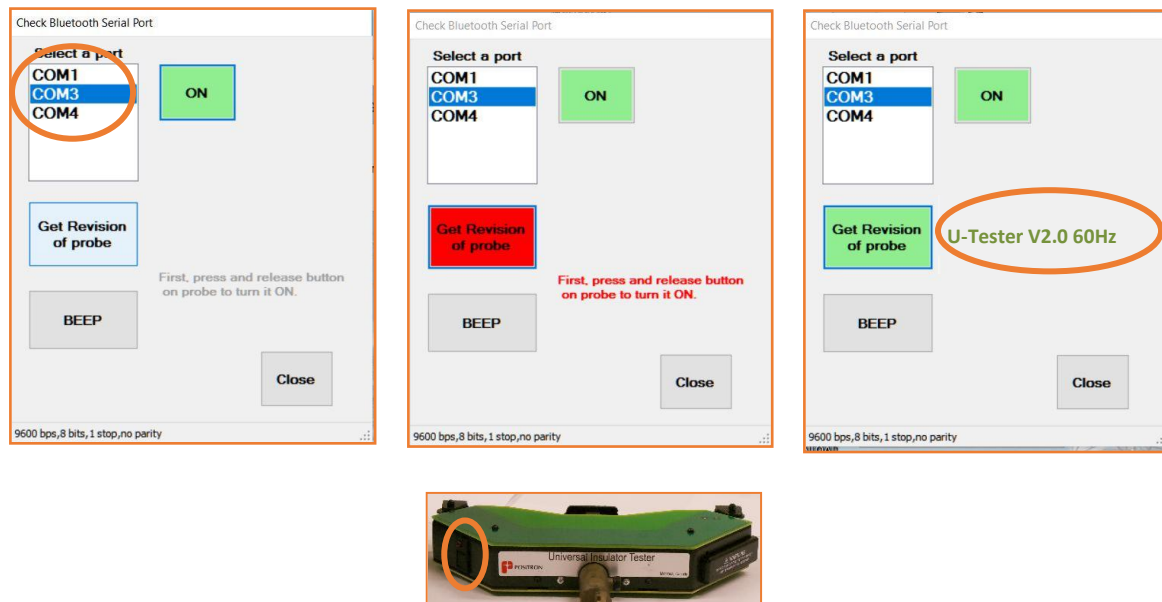


Figure 10



Before going out into the field for an insulator scanning session, ensure the Positron Insulator Tester and Tablet/Laptop are fully charged. The batteries of the Tablet/Laptop are best maintained for longer life by recharging before the battery charge depletes below 50%.

5.2 DURING Testing Sessions

It is important to disable the WIFI of the Tablet/Laptop to avoid long operating system updates while performing a testing session.



Equipped with the Tablet separated from the keyboard, the Ground Operator launches the Insulator Tester Software. Optionally, the camera of the Tablet/Laptop can be used take a picture of the tested tower.

To activate the Probe, remove the Power Switch Cover and move the power switch to the right, toward the DB-9 connector, as shown in Figure 11. The Probe will first enter the Power-On Self-Test (POST) as described in 5.1.5.1.

Ensure the slide switch on the Bluetooth adapter is in the DCE position. Insert the long range Bluetooth Serial adapter into the DB-9 Serial port of the Insulator Tester Probe. The long range Bluetooth Serial adapter is powered by the battery of the Probe.

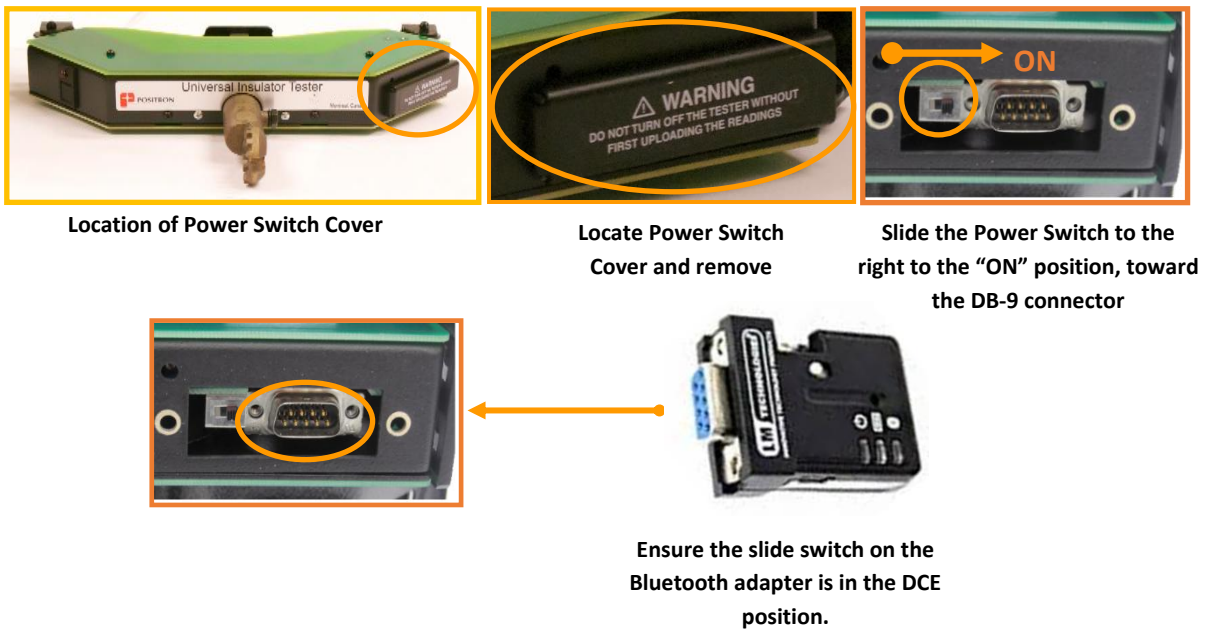



Figure 11

Connect to the Probe prior to Tower Operator ascension Ensuring that the Probe has been switched **ON**, select **Connect to Probe** and reconnect to the same COM port noted in the communications check performed prior to going out in the field for a scanning session.



Select the appropriate COM Port, and Select **ON**.

It is recommended to connect the Bluetooth in the field prior to Tower Operator ascension. Use the **Send Alert to Probe** button in the field to check the communication link. The Probe will respond with an annunciating tone.

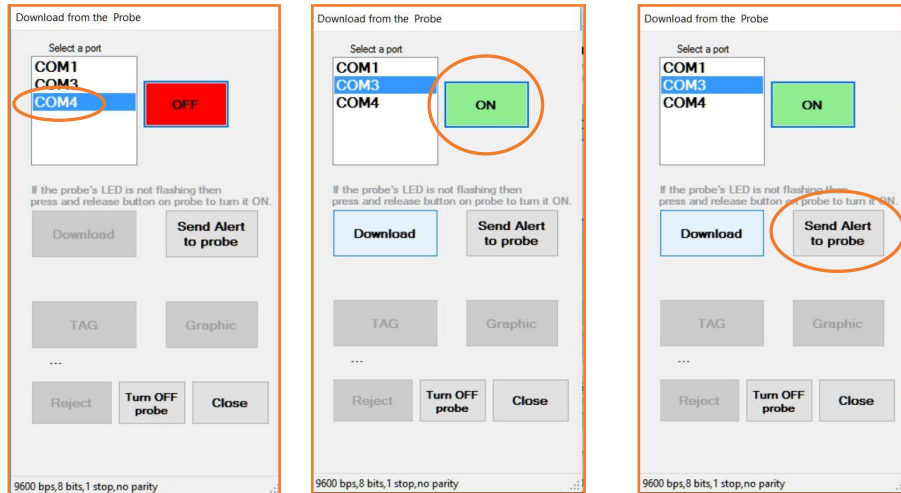

With communication confirmed, the Tower Operator can now ascend. Once in position, the Tower Operator should press the Probe's button to ensure it is in **Awake Mode**. If not, the Ground Operator will be unable to signal the Probe. Ensure that the LED of the Probe is flashing GREEN.

5.2.1 Performing a Scan

5.2.1.1 Preparing the Probe for a Scan

Once the Probe is securely fastened to the hot stick, follow the procedure per Figure 14 (page 31). The Universal Tester Probe uses a pressure sensitive switch actuator to trigger a reading of the E-field. Two comparative curves are obtained during the testing of an insulator. One set of readings is represented in the resulting graphs as a solid red line while the second confirming set of readings is represented in a broken blue line.

In the graphs generated by the Windows-based software, the solid red line is conventionally identified as *Forward* and the broken blue line is identified as *Backward*.

NOTE



To get two curves on the resulting graphs, two readings are required per tested point. A minimum of 5 points (10 readings) is required to make a graph.

To take readings, the Universal Probe should be oriented perpendicularly to the axis of the insulator, as illustrated in Figure 12, and pressed against the insulator, engaging the actuator that takes a reading of the E-Field.

Once a set of readings has been gathered, the operator presses the “Download” button on the touch screen of the Tablet/PC and the E-Field profile of the insulator scan can instantly be viewed.

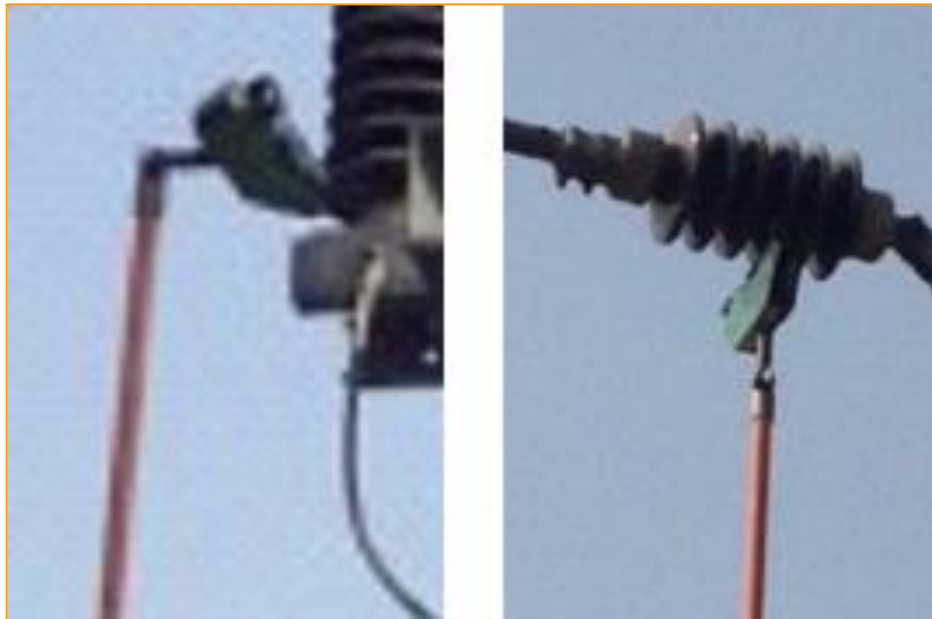


Figure 12

5.2.1.2 Scanning with the Universal Insulator Tester

1. The number of readings you will take to scan an insulator is *equal to two times $2*N$ the number of tested points N on the insulator*. After the download, if the two curves do not match, discard the graphic and rescan the insulator.
2. The scanning session consists of testing of N points. Per Figure 13, best practice in scanning is to take readings by pressing the pressure switch of the Probe against the insulator, starting at the upper end and progressing toward the lower end of the insulator.
3. Once the first set of readings has been obtained, the Tower Operator waits for further instructions.
4. The Ground Operator will **Download** the scanned data to the Tablet/Laptop PC to view the resulting graph and will **Accept** or **Reject** the scan. In either case, the data is wiped from the Probe leaving the Probe ready for the next scan.
5. The Ground Operator selects **Send Alert to Probe** and the annunciating tone attracts the attention of the Tower Operator so the Ground Operator can communicate the next step to the Tower Operator.
6. Ensure that each scan consists of an equal number of readings.

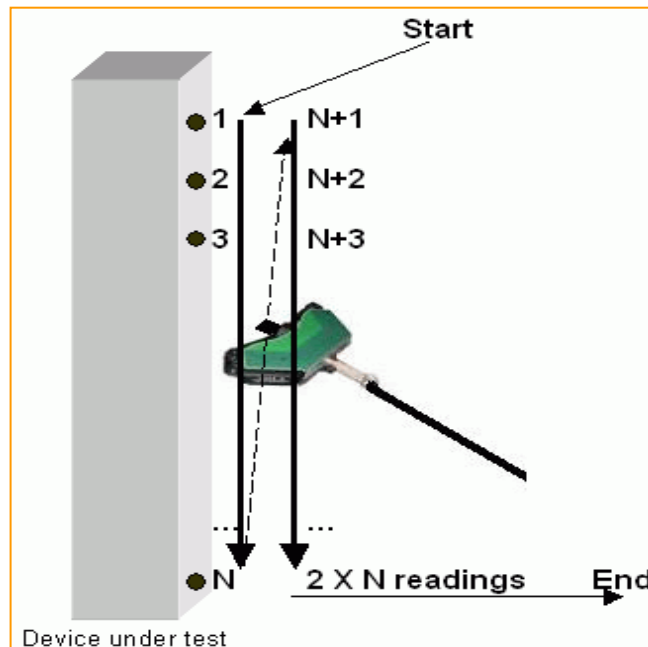


Figure 13

5.2.2 After an Insulator Scan


5.2.2.1 Downloading Data

The results of the scans are immediately downloaded and viewed on the Tablet/Laptop PC.


NOTE




During the Download process, if a system message is returned stating “**No data is available from the Probe**” this indicates that the Insulator Tester Software is in communication with the Probe, but that there is no data in the Probe to download. The **Download** button will still change to **GREEN**, indicating that the Windows-based Insulator Tester Software is able to communicate with the Probe, but that no data was resident.

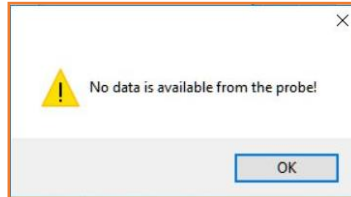


A successful **Download** will be confirmed by a system message stating **Data received successfully** and the **TAG** button will change to **GREEN**.

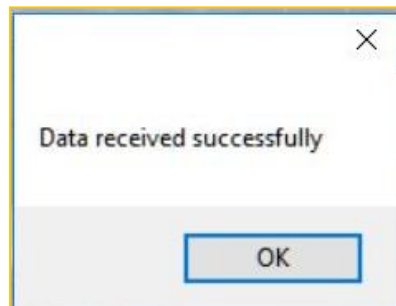


Select **TAG** and the **Select Insulator Identification List** will open.

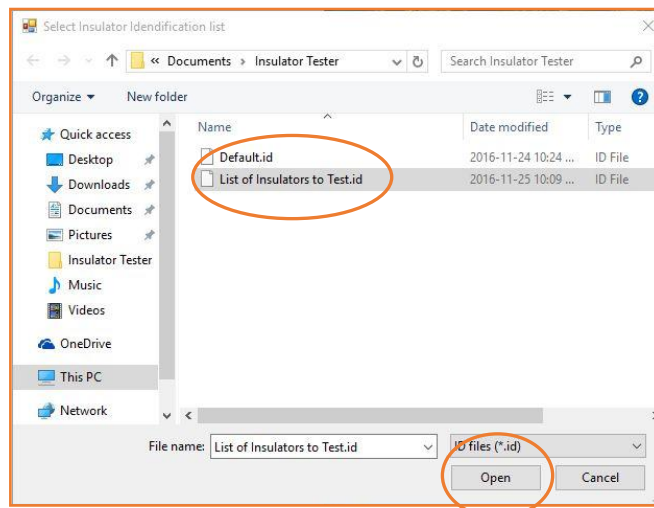


From the **Select Insulator Identification List** you can select and open the Insulator ID List created before the testing session.

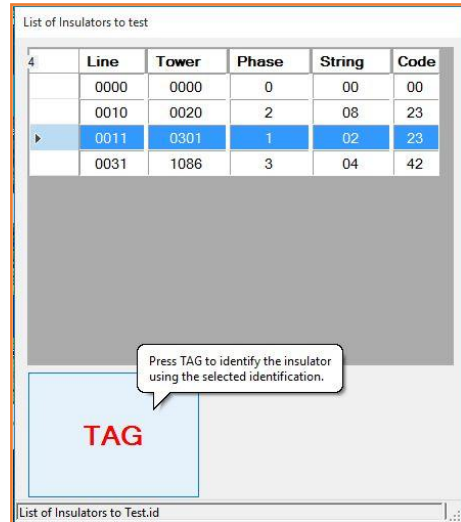


Select the Insulator just scanned from the list created earlier, and select **TAG**.

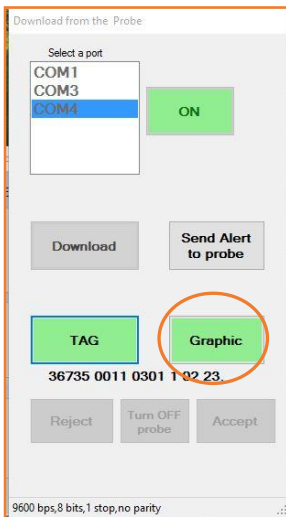


Select **Graphic** to see one or more graphs of the E-Field from scans of the last tested insulator string. If more than one scan was done on the last tested insulator, click or touch the graphic to see the next related graphic.

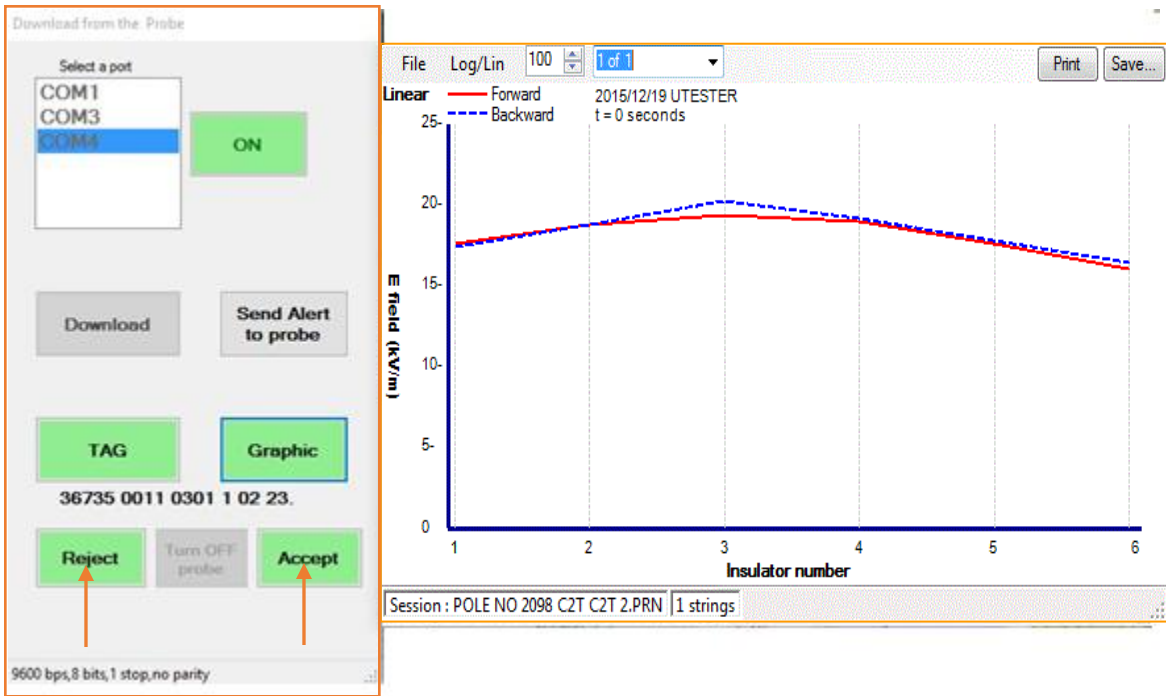


An instant determination can be made whether to **Reject** or **Accept** the last insulator scan. If the scan is rejected, a system message will be returned asking if you are sure you want to delete the downloaded data. If rejected, the data is erased from the Probe, ready to re-scan the insulator.

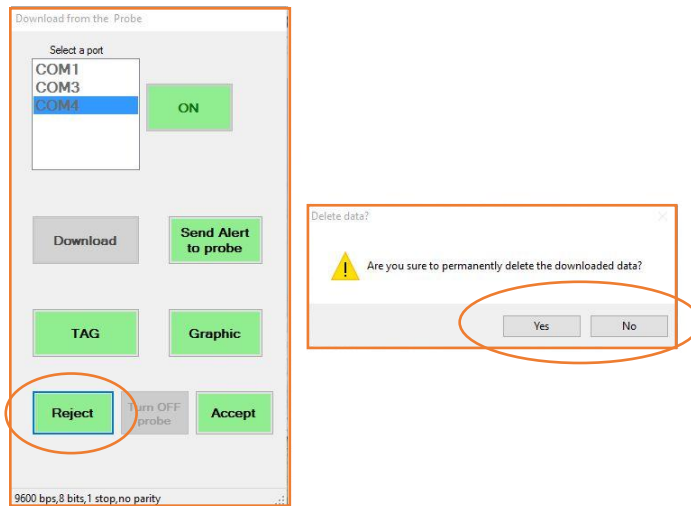

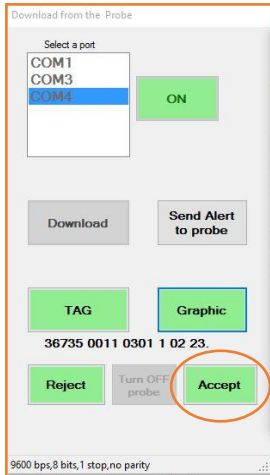

In the example shown, the data was accepted by the Ground Operator.

Once accepted, the next insulator may be scanned. The Ground Operator can attract the attention of the Tower Operator by selecting **Send Alert to Probe** and issue the instructions for another insulator scan.

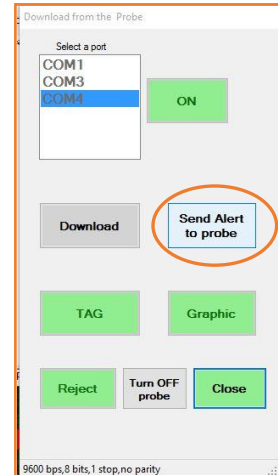

If this was the last planned scan, the Ground Operator may elect to:

- A) Select **Turn OFF** the **Probe** button and place the Probe into Sleep Mode. (The Probe can be awakened by pressing the Push Button of the Probe.)
- B) Optionally, select **Close** button to close the current window (The Bluetooth will disconnect to save power).


If during the process any of the software interface buttons changes to RED when selected, it may mean that the Probe has gone into sleep mode. The Tower Operator must be signaled to wake the Probe by pressing the Probe's Push Button.



5.3 AFTER Testing Sessions

5.3.1 Displaying Graphs

At any time before, during or after a testing session, press the "Graphics" button on the Tablet screen to display the graphs from the data stored in the Tablet/Laptop. Refer to Chapter 6 for interpretation of the graphs

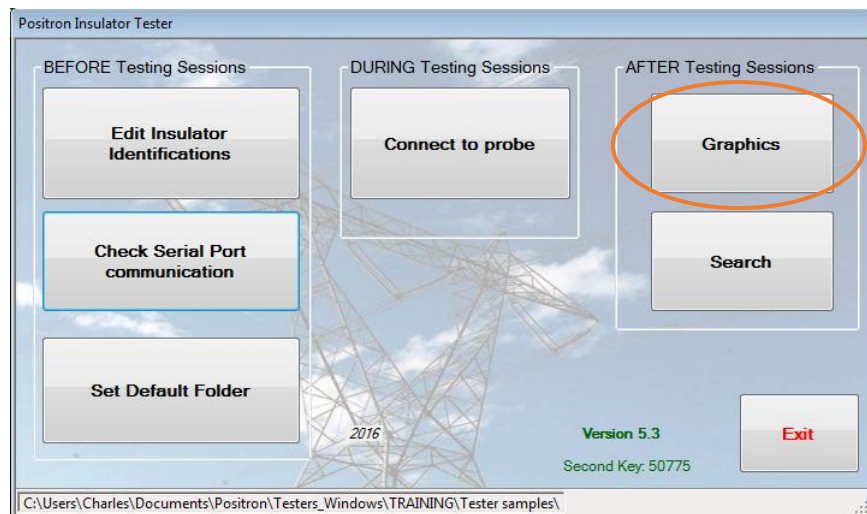


5.3.2 Searching the Database

Search a database for a given insulator in the database to evaluate its degradation over time. See Section 6.6 for a description of superimposed graph comparison.

To **search** for an insulator:

- Browse and select the “**Search**” button from the menu of the Insulator Tester Software,
- Select the folder (and optionally all its subfolders)
- then choose an insulator.
- display the chosen insulator
- select the next insulator
- display its graphic and reduce its opacity to superimpose many graphics
- the degradation over time becomes evident.

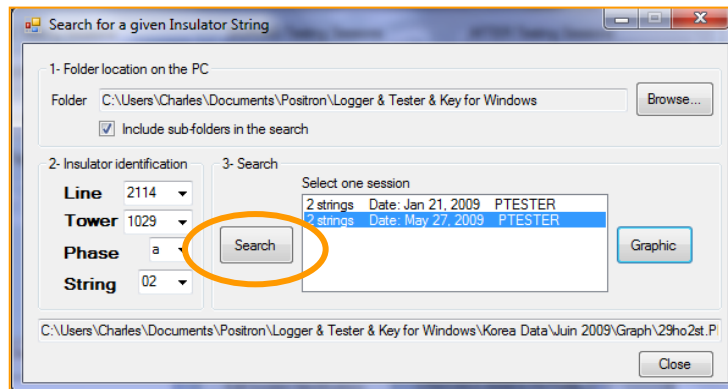

5.4 Important General Notes

- ✓ Always use the same Bluetooth adapter with its paired Tablet/Laptop.
- ✓ If the Probe has not been used for more than six (6) months, recharge its Ni-Cad battery before switching ON the power of the Probe.
- ✓ The Probe's battery should be recharged overnight (9 hours minimum) before each day of testing. If the power switch remains ON, the battery will discharge completely after two days.
- ✓ Recharge the battery of the Probe and the Tablet/Laptop before a day of testing.
- ✓ Switch the power OFF when the Probe is left unused. To switch the Probe OFF, remove the cover and move the slide switch away from the RS232 connector.
- ✓ To verify that the power is ON, press the push-button; the LED should flash, then press the push-button again to switch the light OFF.
- ✓ Do not use the Probe and the Tablet/Laptop in rain or snow.
- ✓ To recharge the battery, remove the RS232 cover (3" x 1"), plug the charger cable to the Probe and plug the universal wall transformer to a 120/220 Vac source, 50 or 60 Hz.
- ✓ If the battery is completely discharged (No light on power-up), switch the Probe OFF while the battery is recharging. Under normal circumstances, it is not necessary to switch the Probe OFF during a recharge.


Switching the Probe OFF will erase all data in the Probe.

NOTE



The equipment covered in this manual should be used and serviced only by competent and trained personnel familiar with and following good work safety practices. This equipment is intended solely for the use by such trained personnel. This manual is not intended as a substitute for adequate training and experience. Appropriate safety procedures must be followed at all times in the use of this equipment.

WARNING



This equipment will not detect any non-conductive defects including non-conducting mechanical defects.

Chapter 6

Interpreting Graphic Results

6.0 Interpreting Graphic Results

6.1 Understanding the Graphic

The curves on the graph are generated using two different line colors depending on the first or second pass (UTester) when the reading is acquired.

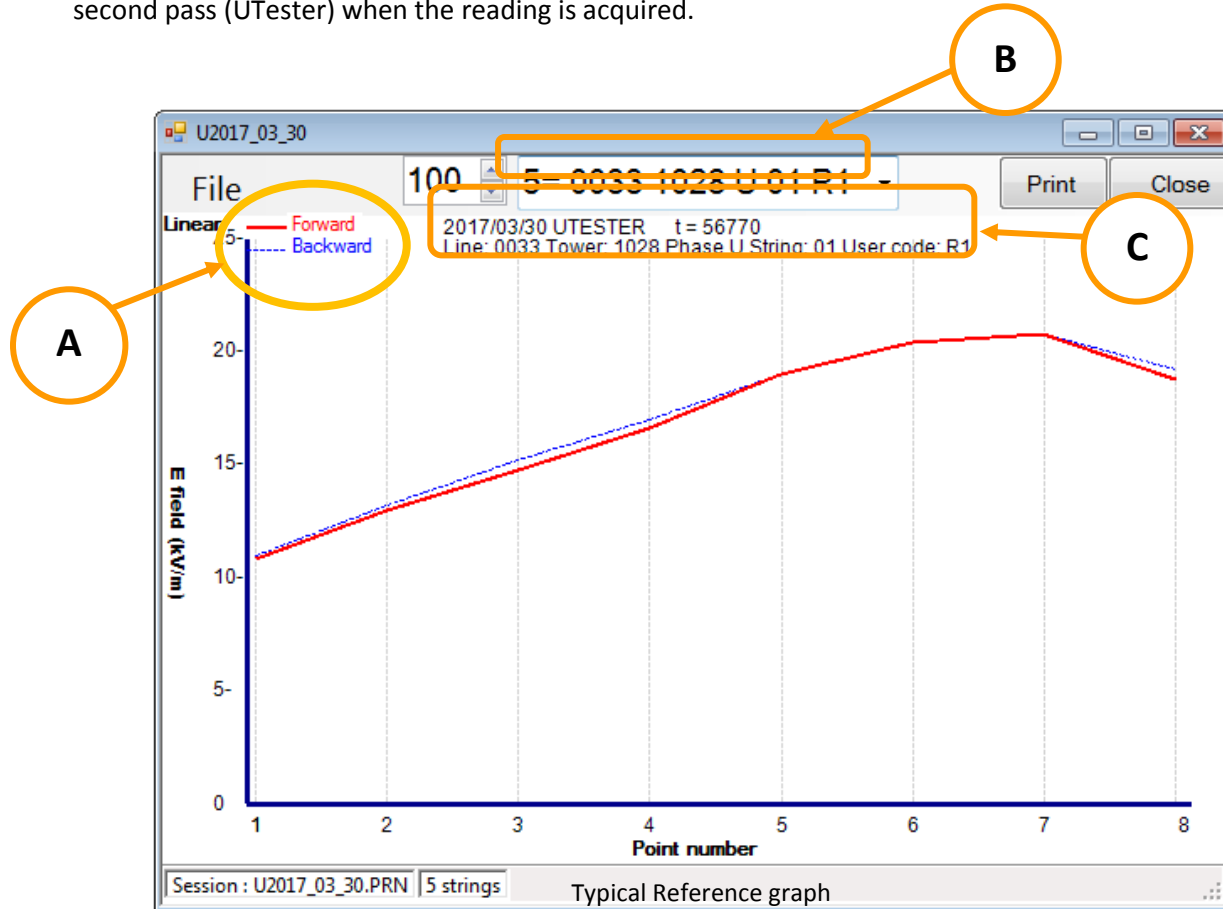


Figure 15

- A) The solid **RED** line indicates the readings taken on the first, or **forward**, series of readings taken with the Universal Insulator Tester "**UTESTER**". The broken **BLUE** line indicates the second series of readings of the UTTester.
- B) This section of the graph offers a truncated identifier for the porcelain testers being scanned.
 - a. **0033** identifies the particular power transmission line being scanned
 - b. **1028** identifies a particular tower associated with the power transmission line being scanned
 - c. **U** indicates the power phase associated with the power transmission line being scanned
 - d. **01** indicates that it is the 1st insulator string,
 - e. These last 2 characters are a user-defined code and are not used by the software.

- C) Contains detailed information of the scan.
- “2017/03/30” indicates the date of the scan
 - “UTESTER” indicates that the a Universal Tester was used
 - “t = 56770” indicates the number of seconds since midnight,
 - “Line: 0033 Tower: 1028 Phase U String: 01” identifies the tested insulator,
 - “User code: R1” can be any code defined by the user,
- D) “Point number” indicates the tested point number along the insulator.

6.2 Linear / Log Graphic Options

The “Linear” display mode is used to display the electric field readings from the Probe on a linear scale. It is used for lower voltage applications (13 or less points).

The “Log” display mode is used to amplify the small variations in the lower portion of the curve. It is normally used for higher voltage applications (14 or more points).


The Windows-based Insulator Tester software allows you to toggle the scale of the graphs being viewed between **Linear** and **Logarithmic** scale for 14 or more points. Only **Linear** scale is used for 13 points or less.

6.3 Interpreting Results

On lower voltages insulators, such as 25kV used for electric railways, a comparative methodology for determining the relative health of an insulator is required.

It is recommended to test several identical insulators to obtain a graphic “health signature” for those particular lower voltage insulators. This signature serves as the baseline for evaluating like-insulators. As an example, on a 3-phase distribution line, the signature from each phase should be identical. A minimum of 5 skirts per insulator is recommended.

The resulting graphs of the E-field of the insulators can be superimposed for comparison. By placing one graph over the other and reducing the opaqueness down from 100, one graph will become visible through the other. This method can also be used to evaluate the degradation over time of a given insulator, using the Search button on the main screen.

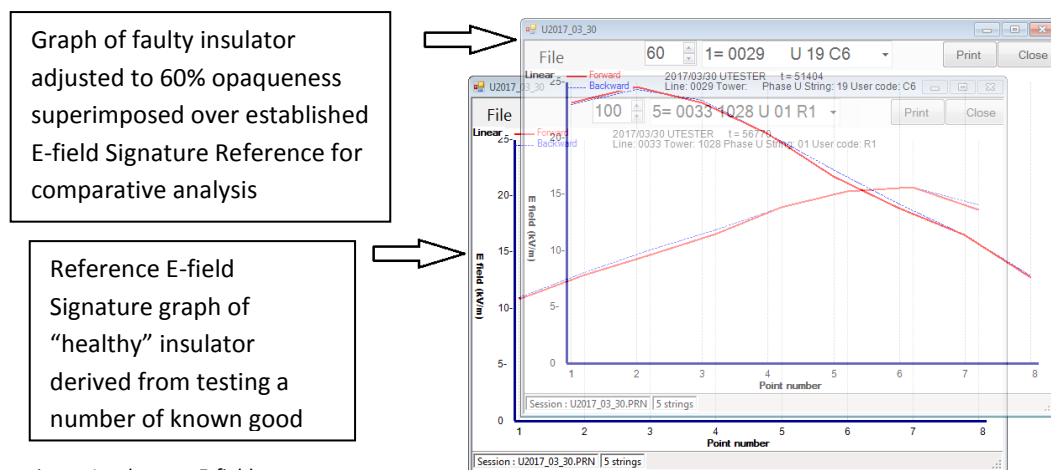

Comparing Insulator E-field Signatures Using Superimposed Graphs

Note: Establishment of a reference signature of “healthy insulators” may differ depending on local conditions. As such, the reference signature indicated in this figure is illustrative only.

Chapter 7

Specifications

7.0 Specifications

Parameter	Specifications
Maximum points per insulator (Universal)	60 tested points (120 readings per insulator)
Minimum points per insulator (Universal)	3 tested points
Maximum corona protection	1 million Volts
Minimum battery recharging time	9 hours (one night)
Cumulative use between charges	12 hours
Maximum period between battery charges	1 day
Operating temperature range of the Probe	-22°F to 122°F (-30°C to 50°C)
Dimensions of Universal Tester	10.6" x 4.7" x 2" (27 cm x 12 cm x 5 cm)
Weight	1.7 lbs. (0.8 kg)
Factory calibration (User recalibration is not required)	500 raw units = 100 kV/m longitudinally

NOTE To be used on AC lines only.



Chapter 8

Important Information

8.0 Important Information

8.1 Service and Support

Positron Contact Information

General information	Positron Inc. 581 Buchan Street Montreal, Québec, Canada H4P 2R8 US and Canada: 1-888-577-5254 International: 1-514-345-2214 Fax: 1-514-345-2271 E-mail: info@positronpower.com Web site : www.positronpower.com
---------------------	---

Repairs	US and Canada: 1-888-577-5254, Option 1 International: 001-514-345-2220, Option 1
---------	--

8.2 Technical Customer Support

Positron is committed to providing excellent ongoing technical support to its customers. A team of specialists is always available for telephone consultations, or for on-site visits to assist in maintenance and troubleshooting.

For pricing information or assistance in the planning, configuration, use and interpretation of data of the equipment, contact Technical Customer Support (TCS) at 1-888-577-5254, Option 1, Option 3 (US and Canada) or +1-514-345-2220 Option 1, Option 3 (International).

8.3 Customer Training

Full customer training courses on the operation and results interpretation of Positron Insulator Testers are available. For information, contact Positron.

8.4 Repair Service

All warranty repairs are performed at no cost. Positron reserves the right to repair or replace any equipment that has been found to be defective.

For information about out-of-warranty repairs, contact Positron's Repair department at 1-888-577-5254 (US and Canada) or 001-514-345-2220 (International).

Due to the varied nature of repairs, no specific turnaround can be guaranteed, but average turnaround time is two weeks from date of receipt. In emergency situations, special arrangements can be made. All repaired items are warranted for a period of 180 days.

Before returning any items to Positron for repair, warranty repair or replacement, call the Repair Department to obtain a Return Material Authorization (RMA) number. Parts returned without RMA numbers cannot be accepted. The RMA number must always be clearly marked on all

boxes and crates and on all shipping documents. Bulk repairs (more than five items) will require additional processing time, so please take this into consideration when requesting an RMA.

To accelerate the repair process, whenever possible, include a report detailing the reason for return with the unit(s). Also, please include the name and phone number of a contact person should our Repair department need further information.

When packing items being returned for repair, please ensure they are properly packed and shipped in their carrying cases to avoid further damage.

8.5 Warranty

Subject to the provisions of this paragraph, Positron warrants that the equipment shall perform in accordance with Positron's specifications. The warranty remains valid for two (2) years from the date of shipment. The warranty fully covers workmanship, materials and labor. Positron shall, at its sole discretion, repair or replace the problem unit.

During the warranty period, freight costs to ship defective equipment to Positron are borne by the Customer, while the return of replaced or repaired equipment is at Positron's expense.

8.6 Limitation of Liability

Subject to anything to the contrary contained herein, Positron's sole obligation and liability and the customer's sole remedy for Positron's negligence, breach of warranty, breach of contract or for any other liability in any way connected with or arising out of, the equipment or any services performed by Positron shall be as follows:

- In all situations involving performance or non-performance of the equipment or any component thereof, the customer's sole remedy shall be, at Positron's option, the repair or replacement of the equipment or said component.
- For any other claim in any other way related to the subject matter of any order under, the customer shall be entitled to recover actual and direct damages; provided that Positron's liability for damages for any cause whatsoever, and regardless of the form of the action, whether in contract or in tort (including negligence), shall be limited to the value of the order.

Positron shall not be obligated to repair or replace any item of the equipment which has been repaired by others, abused or improperly handled, improperly stored, altered or used with third party material or equipment, which material, or equipment may be defective, of poor quality or incompatible with the equipment supplied by Positron, and Positron shall not be obligated to repair or replace any component of the equipment which has not been installed according to Positron specifications.

IN NO EVENT SHALL POSITRON BE LIABLE FOR ANY INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY OR SIMILAR OR ADDITIONAL DAMAGES INCURRED OR SUFFERED INCLUDING LOSS OF PROFITS, LOSS OF REVENUES, LOSS OF DATA, LOSS OF BUSINESS INFORMATION, LOSS OF GOODWILL, LOSS OF LIFE, STAFF INJURY, LOSS OF EXPECTED SAVINGS OR BUSINESS INTERRUPTION ARISING OUT OF OR IN CONNECTION WITH THE EQUIPMENT, A PURCHASE ORDER SUPPLIES, MAINTENANCE SERVICES OR OTHER SERVICES FURNISHED HEREUNDER, EVEN IF POSITRON HAS BEEN ADVISED OR IS AWARE OF THE POSSIBILITY OF SUCH DAMAGES.

EXCEPT AS EXPRESSLY SET FORTH IN THIS AGREEMENT, POSITRON DISCLAIMS ANY FURTHER CONDITIONS, REPRESENTATIONS OR WARRANTIES, WHETHER WRITTEN OR ORAL, EXPRESSED OR IMPLIED, INCLUDING THE CONDITIONS AND WARRANTIES OF MERCHANTABILITY, MERCHANTABLE QUALITY, FITNESS FOR A PARTICULAR

PURPOSE, TITLE, PERFORMANCE AND THOSE ARISING FROM STATUE, TO THE EXTENT PERMITTED BY LAW. POSITRON DOES NOT WARRANT THAT THE SYSTEM WILL OPERATE WITHOUT INTERRUPTION OR THAT IT WILL BE ERROR FREE.

8.7 Disclaimer Notice

The equipment covered in this manual should be used and serviced only by competent and trained personnel familiar with and following good work safety practices. This equipment is intended solely for the use by such trained personnel and is not intended as a substitute for adequate training and experience. Appropriate safety procedures must be followed at all times in the use of this equipment.

The descriptive information contained in this manual is not intended to and does not cover all details, usages, or methods of use of this equipment, and such information is not intended to discuss all situations or contingencies which might be encountered with respect to the operation, maintenance or use of the equipment. This information is provided for purposes of description only and is not to be relied upon or utilized by any purchaser as instructions, warranties, specifications or use certifications. Although Positron Inc. has made every effort to ensure the accuracy of the information contained herein, this document is subject to change without notice due to ongoing product development. Any additional information which may be required by any purchaser regarding the use, maintenance, installation or operation of this equipment should be referred to Positron Inc.

8.8 Cancellation and Rescheduling Charges

Should the customer cancel, prior to shipment, any part of an order, the customer agrees to pay to Positron cancellation charges, not as a penalty, which shall total all expenses, including labor expenses, incurred by Positron prior to said cancellation. Modified equipment that has been specially developed for the customer's specific applications shall not be subject to cancellation. Cancellation or rescheduling is not permissible after shipment of the System.



Insulator Testers for High Voltage Live Lines

Personnel Safety and Maintenance Test Equipment



Automated Electric Field Assessment Along Energized Insulators

- Instantaneous audible and visual **DANGER** alarm
- Safe, easy to use and lightweight (1.6 Kg)
- No electrical contact with insulators
- Early detection and recording of faults (Stores up to 15,000 readings)
- Works on energized insulators up to 1,000,000 Volts
- **SAFETY** and maintenance tool
- Used for all Porcelain, Composite and Glass Insulators
- Provides contamination assessment
- Reliable, proven, deployed **WORLDWIDE**



**Protect the Safety of Personnel
Working in Close Proximity to Live High Voltage Insulators**

Positron's Suite of Insulator Products

Fast & Easy to Use

Simply slide the tester sled along the insulator (string).

Positron's Insulators Testers and software enhances worker safety with an Instant Graphical Download of the insulator's surrounding E-field for immediate on-site viewing, providing immediate warning for **DANGEROUS** conditions.



Porcelain Tester

The Porcelain Tester is used for Porcelain and Glass insulators.



Composite Tester

The Composite Tester is used to detect floating or connected defects for Composite (or Polymeric) insulators.



Universal Tester



The Universal Tester is ideal for substation environments (conical shaped bushings, station hollow posts, composite (polymeric) posts, lightning arresters, cable terminations, etc.).



